

TAILWHEEL & STABILIZER COWL INSTALLATION continued

Figure 21

Index

No.	Part No.	Description	Cond.
	Attach hdw.	16 ea. AN520-10-7, 16 ea. AN365-1032A, 32 ea. AN960-10	F/N
10	75-2349-1	Bracket assy-tailwheel boot lh	N-P
10	75-2349-2	Bracket assy-tailwheel boot rh	N-P
6	AG75-2372	Cowl assy-stabilizer to fin, lh, anodized	FAA-PMA
7	AG75-2372-1	Cowl assy-stabilizer to fin, rh, anodized	FAA-PMA
8	AG75-2416	Dzus bracket assy-cowl fastener support, 5 required	FAA-PMA
9	S6-425	Spring-dzus, AG75-2416 bracket, 5 required	F/N
	Attach hdw.	S6-425 10 ea. AN505-4-6, 10 ea. AN365B-440	F/N
	Attach hdw.	AG75-2416 10 ea. AN520-10-8, 10 ea. AN365-1032A, 12 ea. AN960-10	F/N

FUSELAGE COWL INSTALLATION - LANDING GEAR

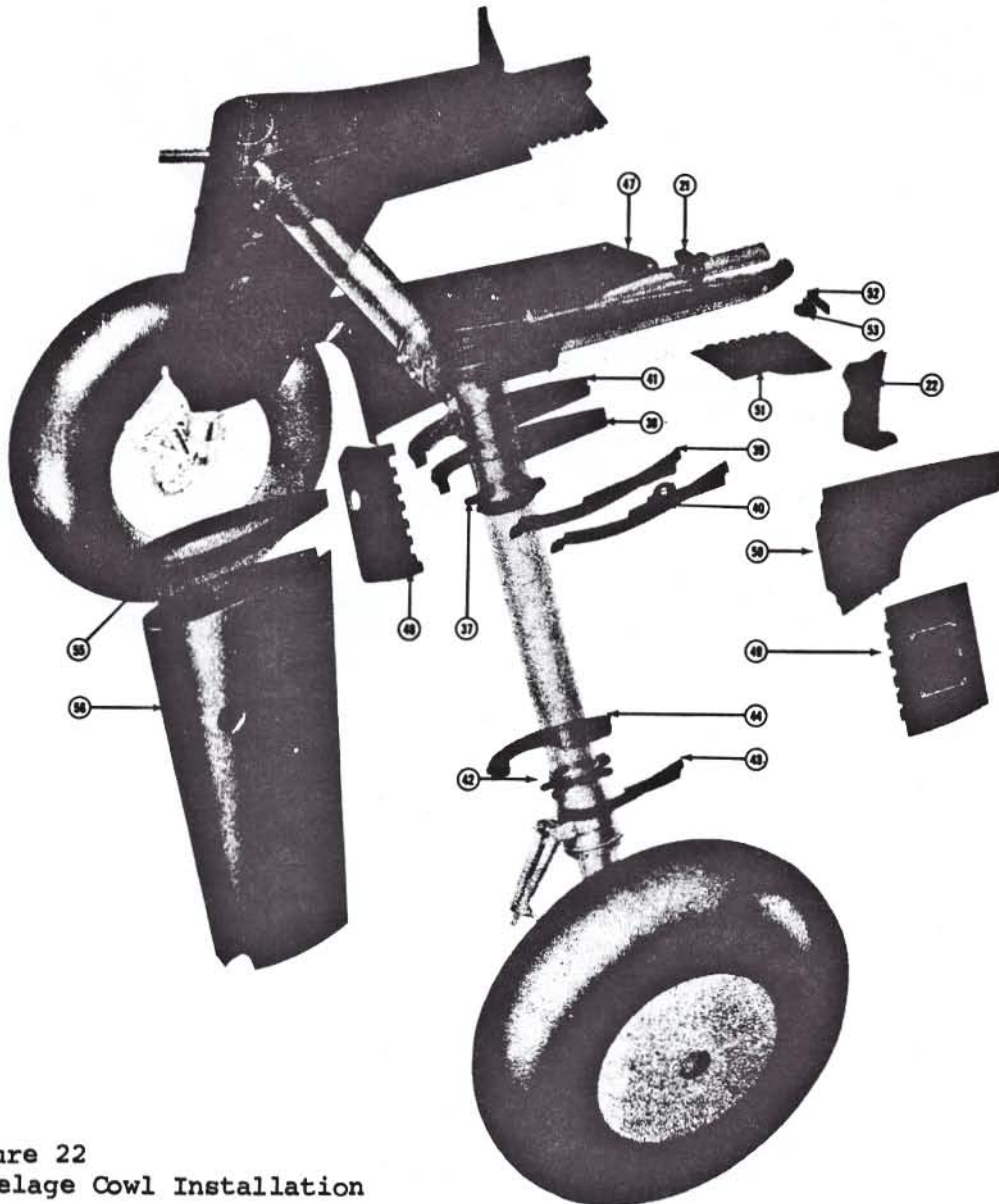


Figure 22  
Fuselage Cowl Installation

FUSELAGE COWL INSTALLATION-LANDING GEAR

Figure 22

Index

No.	Part No.	Description	Cond.
21	AG75-2361	Clamp assy-cowl support bulkhead lh	FAA-PMA
21	AG75-2361-1	Clamp assy-cowl support bulkhead rh	FAA-PMA
	Attach hdw.	2 ea. AN3-15, 2 ea. AN310-3, 2 ea. AN380-2-2	F/N
22	75-2341	Bulkhead assy-fuselage side cowl support lh	N-P
22	75-2341-1	Bulkhead assy-fuselage side cowl support rh	N-P
	Attach hdw.	4 ea. AN520-10-10, 4 ea. AN365-1032A, AN960-10	F/N
37	75-2343	Clamp-landing gear fairing, upper bulkhead, 2 req.	N-S
38	75-2406	Bulkhead assy-upper landing gear fairing lh, 2 req.	N-P
39	75-2406-1	Bulkhead assy-upper landing gear fairing rh, 2 req.	N-P
	Attach hdw.	14 ea. AN520-10-8, 2 ea. AN510-10-12, 16 ea. AN365-1032A, 22 ea. AN960-10	F/N
40	75-2405	Bulkhead-landing gear fillet, outer lh	N-P
40	75-2405-1	Bulkhead-landing gear fillet, outer rh	N-P
41	75-2407	Bulkhead-landing gear fillet, inner lh	N-P
41	75-2407-1	Bulkhead-landing gear fillet, inner rh	N-P
	Attach hdw.	6 ea. AN520-10-8, 6 ea. AN365-1032A, 12 ea. AN960-10	F/N
42	75-2344	Clamp assy-landing gear fairing, lower bulkhead	N-S
43	75-2342	Bulkhead assy-landing gear fairing lower bulkhead, 2 req.	N-S
44	75-2342-1	Same as above except right hand	N-S
	Attach hdw.	14 ea. AN520-10-8, 2 ea. AN520-10-12, 16 ea. AN365-1032A, 30 ea. AN960-10	F/N
47	AG75-2340	Fillet assy, fiberglass-landing gear fairing lh	FAA-PMA
47	AG75-2340-1	Fillet assy, fiberglass-landing gear fairing rh	FAA-PMA
	AN931-16-22	Grommet-elastic, 2 required	F/N
	Attach hdw.	24 ea. AN526-1032-7, 2 ea. AN526-1032-8, 2 ea. AN526-1032-6, 10 ea. AN365-1032A, 10 ea. AN960-10	F/N
48	AG75-2346	Fairing assy-upper outside l. gear lh, anodized	FAA-PMA
48	AG75-2346-1	Fairing assy-upper outside l. gear rh, anodized	FAA-PMA
	Attach hdw.	8 ea. AN526-1032-7, 2 ea. AN526-1032-6, 2 ea. AN526-1032-4	F/N
49	AG75-2346-6	Inspection door assy w/instr. plate, lh, anodized	FAA-PMA
49	AG75-2346-7	Same as above except rh	FAA-PMA
	AN415-8	Pin-hinge for AG75-2346-6, -7 doors	F/N
50	AG75-2346-12	Fairing assy-upper outside l. gear rear, lh, anodized	FAA-PMA
50	AG75-2346-13	Same as above except rh	FAA-PMA
	Attach hdw.	18 ea. AN526-1032-7, 2 ea. AN526-1032-6, 2 ea. AN365-1032A, 2 ea. AN960-10	F/N
51	AG75-2338	Door assy-fuselage wing root insp. lh, anodized	FAA-PMA
51	AG75-2338-1	Same as above except rh	FAA-PMA
	AN415-8	Pin-hinge for AG75-2338, 2338-1 doors	F/N
52	AGE75N1-2302-16	Filler block, 2 required	N-P
	Attach hdw.	4 ea. AN550-8-6	F/N
53	75-2404	Bracket assy-spring support, 2 required	N-P
55	75-2409	Roll-landing gear fairing gap closure, 2 required	N-P
56	AGE75N1-2348	Fairing-landing gear lower lh-Haliburton short gear, anodized	FAA-PMA
56	AGE75N1-2348-1	Same as above except rh	FAA-PMA
56	AG75-2345	Fairing-landing gear lower lh-Bendix gear, anodized	FAA-PMA
56	AG75-2345-1	Same as above except rh	FAA-PMA
	Attach hdw.	38 ea. AN526-1032-7	F/N
	75-2629	Instruction plate, l.g. oleo door	F/N