



Figure 39
Starter Panel Support Assembly & Crank Extension Assembly

Index

No.	Part No.	Description	Cond.
1	75-2845	Clamp assy-starter panel support, R-680	Recond.
1	A75N1-2852	Bracket assy-starter crank extension, R-670	Recond.
2	A75N1-2863	Bearing-starter crank extension, R-670, R-680	N-S
3	A75N1-2858	Shaft assy-starter crank extension, R-670, R-680	N-S
4	AG75-2869	Rod-starter clutch, R-680	FAA-PMA
4	A75N1-2838	Control assy-starter clutch & mag spark, R-670	N-S
5	AN315-3	Nut-AG75-2869 Rod	F/N
6	75-2842	Handle-starter trip, R-670, R-680	N-S
<u>ADDITIONAL PARTS</u>			
	B75N1-2811	Channel-manual spark control pulley bracket, R-670	N-S
	A75N1-2812	Support-starter panel, R-680	N-S
	75-2812	Clamp assy-starter crank support	N-S
	75-2813	Support-booster mag, R-670, R-680	N-S
	75-2815	Clip assy-starter crank support, R-670, R-680	N-S
	75-2817	Tube booster magneto torque, R-680	N-S
	75-2818-1	Guard-1-1/4" pulley, R-670, R-680	N-S
	75-2818-2	Guard-1-1/4" pulley, R-670, R-680	N-S
	75-2819	Bracket-starter control pulley, R-670, R-680	N-S
	A75N1-2819	Universal joint assy-starter crank ext., R-670, R-680	N-S
	75-2823	Tube assy-starter crank support, R-670, R-680	N-S
	75-2831	Bearing assy-booster magneto drive, R-680	N-S

STARTER PANEL SUPPORT ASSEMBLY & PARTS, R-670 PT-17 N2S-4, R-680 PT-13 N2S-5 cont'd

Additional parts continued

Figure 39

Index

No.	Part No.	Description	Cond.
	A75N1-2834	Bushing-starter crank set (use A75N1-2863)	
	A75N1-2838	Control assy-starter clutch & mag spark, R-670	N-S
	A75N1-2841	Bracket assy-spark control pulley, R-670	N-S
	75-2844	Support-starter panel, R-680	N-S
	75-2845	Clamp assy-starter panel support, R-670, R-680	N-S
	A75N1-2845-3	Crank-hand, starter, R-670, R-680	N-S
	75-2851	Clip-starter crank support, R-670, R-680	N-S
	A75N1-2853	Boot assy-starter crank extension, R-670, PT-27	N-S
	A75N1-2858-1	Extension assy-starter crank, R-670, R-680	N-S
	A75N1-2860	Brace-engine mount starter extension bracket, R-670	N-S
	A75N1-2863	Bearing-starter crank extension, plain, R-670, R-680	N-S
	75-2888	Collar-starter crank extension, R-670, R-680	N-S
	75-2889	Bushing-starter crank extension, R-670, R-680	N-S
	75-2990	Bearing assy-starter crank extension, R-670, R-680	N-S