

B Figure 51
Oil System Installation

Index

| No. | Part No. | Description | Cond. |
|-----|-----------------|--|---------|
| 1 | AG75-3028 | Oil tank assy, R-670 | FAA-PMA |
| 1 | E75N1-3002 | Oil tank assy, R-680 | Recond. |
| 2 | E75N1-3013-1 | Oil cap & neck, light type(not shown)R-670,R-680 | F/N |
| 3 | E75N1-3013-2 | Oil cap-light type (not shown) R-670, R-680 | F/N |
| 3 | AGE75N1-3013-2C | Oil cap & dip stick, light type,(not shown)R-670 | FAA-PMA |
| 3 | E75N1-3013-2L | Oil cap & dip stick, light type,(not shown)R-680 | F/N |
| 3 | E75N1-3013-3 | Oil cap only-spring loaded (shown) | N-S |
| 3 | E75N1-3013-3C | Oil cap & dip stick,spring loaded(shown) R-670 | N-S |
| 3 | E75N1-3013-3L | Oil cap & dip stick,spring loaded(shown) R-680 | N-S |
| 4 | E75N1-3017 | Cover-oil tank sump, R-670, R-680 | N-S |
| | 37A5949 | Gasket-oil tank sump, R-670, R-680 | F/N |
| | Attach hdw. | 8 ea. AN500-416-12, 8 ea. AN960-416, 8 ea. AN935-416 | F/N |
| 5 | 75-3018 | Support assy-oil tank lh, R-670, R-680 | N-S |


OIL TANK INSTALLATION, R-670, PT-17, N2S-4 & R-680, PT-13, N2S-5 continued

Figure 51

Index

| No. | Part No. | Description | Cond. |
|-------|-------------|--|-------|
| 5 | 75-3018-1 | Support assy-oil tank rh, R-670, R-680 | N-S |
| 6 | 75-3029 | Clamp-oil tank support, R-670, R-680, 4 required | N-S |
| | Attach hdw. | 4 ea. AN4-16, 2 ea. AN4-17, 4 ea. AN310-4, 8 ea. AN960-10, 4 ea. AN380-2-2 | F/N |
| 7 | 75-3021-1 | Strap assy-oil & fuel tank, R-670, R-680, 2 required | N-S |
| 8 | 75-3148-4 | Felt pad-fuel & oil tank strap, R-670, R-680, 2 req. | N-P |
| 9 | 75-3148-6 | Felt pad-fuel & oil tank strap, R-670, R-680, 2 req. | N-P |
| 8 & 9 | 75-3148-OK | Oil tank felt kit | N-P |
| | Attach hdw. | 2 ea. AN135-22S, 2 ea. AN393-33, 2 ea. AN380-2-2 | F/N |
| 10 | S-253-26 | Spacer-3/16" bolt, 4 required | N-P |
| | Attach hdw. | 8 ea. AN960-10, 4 ea. AN380-2-2, 4 ea. AN310-3, 4 ea. AN3-15 | F/N |
| 11 | 3AJ8-8 | Jumper-bonding, 2 required | F/N |

FUEL SYSTEM INSTALLATION COCKPIT CONTROLS FRONT & REAR-FUEL COCK CONTROL
R-670, PT-17, N2S-4 & R-680, PT-13, N2S-5

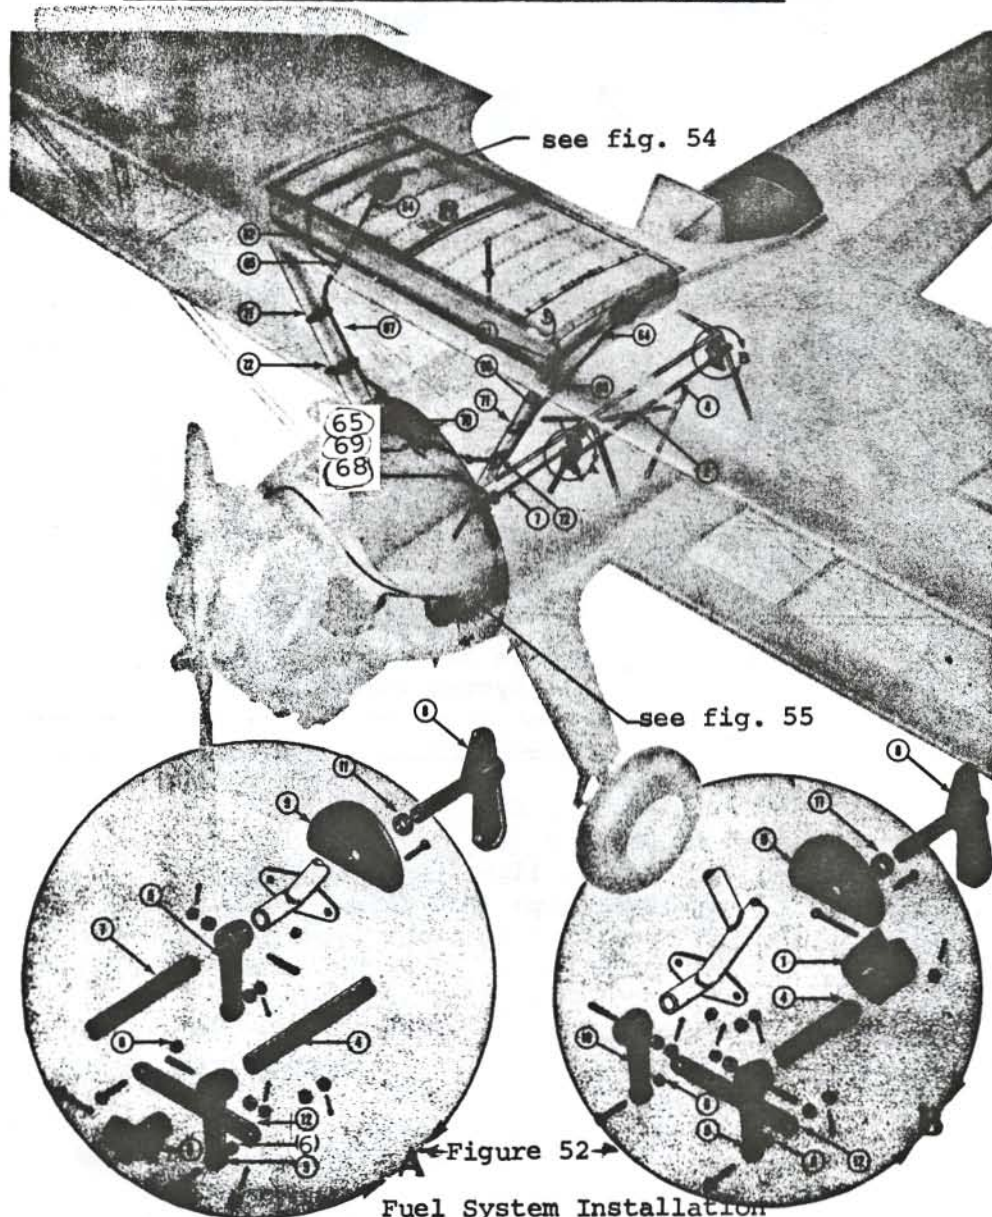

Fuel System Installation