

B Figure 51
Oil System Installation

Index


No.	Part No.	Description	Cond.
1	AG75-3028	Oil tank assy, R-670	FAA-PMA
1	E75N1-3002	Oil tank assy, R-680	Recond.
2	E75N1-3013-1	Oil cap & neck, light type(not shown)R-670,R-680	F/N
3	E75N1-3013-2	Oil cap-light type (not shown) R-670, R-680	F/N
3	AGE75N1-3013-2C	Oil cap & dip stick, light type,(not shown)R-670	FAA-PMA
3	E75N1-3013-2L	Oil cap & dip stick, light type,(not shown)R-680	F/N
3	E75N1-3013-3	Oil cap only-spring loaded (shown)	N-S
3	E75N1-3013-3C	Oil cap & dip stick,spring loaded(shown) R-670	N-S
3	E75N1-3013-3L	Oil cap & dip stick,spring loaded(shown) R-680	N-S
4	E75N1-3017	Cover-oil tank sump, R-670, R-680	N-S
	37A5949	Gasket-oil tank sump, R-670, R-680	F/N
	Attach hdw.	8 ea. AN500-416-12, 8 ea. AN960-416, 8 ea. AN935-416	F/N
5	75-3018	Support assy-oil tank lh, R-670, R-680	N-S

Figure 51

Index

No.	Part No.	Description	Cond.
5	75-3018-1	Support assy-oil tank rh, R-670, R-680	N-S
6	75-3029	Clamp-oil tank support, R-670, R-680, 4 required	N-S
	Attach hdw.	4 ea. AN4-16, 2 ea. AN4-17, 4 ea. AN310-4, 8 ea. AN960-10, 4 ea. AN380-2-2	F/N
7	75-3021-1	Strap assy-oil & fuel tank, R-670, R-680, 2 required	N-S
8	75-3148-4	Felt pad-fuel & oil tank strap, R-670, R-680, 2 req.	N-P
9	75-3148-6	Felt pad-fuel & oil tank strap, R-670, R-680, 2 req.	N-P
8 & 9	75-3148-OK	Oil tank felt kit	N-P
	Attach hdw.	2 ea. AN135-22S, 2 ea. AN393-33, 2 ea. AN380-2-2	F/N
10	S-253-26	Spacer-3/16" bolt, 4 required	N-P
	Attach hdw.	8 ea. AN960-10, 4 ea. AN380-2-2, 4 ea. AN310-3, 4 ea. AN3-15	F/N
11	3AJ8-8	Jumper-bonding, 2 required	F/N

FUEL SYSTEM INSTALLATION COCKPIT CONTROLS FRONT & REAR-FUEL COCK CONTROL
R-670, PT-17, N2S-4 & R-680, PT-13, N2S-5

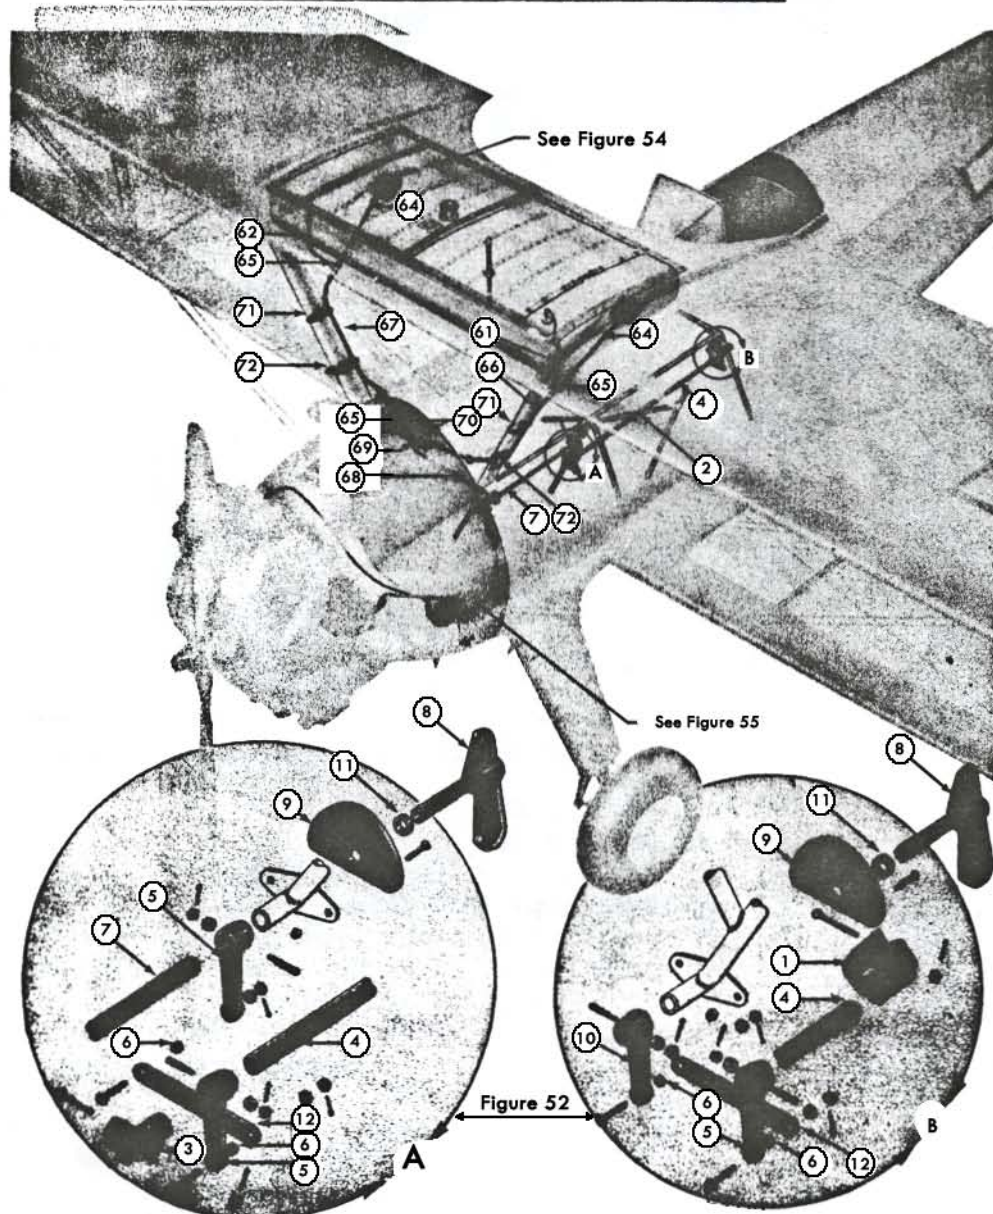

Fuel System Installation