

Figure 56 Elevator Control Installation

Index

No.	Part No.	Description	Cond.
2	AG75-3353	Tube assy-control stick torque	FAA-PMA
3	75-3352	Horn-aileron control	N-S
	Attach hdw.	2 ea. AN4-30A, 2 ea. AN960-416, 2 ea. AN365-428A	F/N
4	AG73-3301	Bearing housing-rear	FAA-PMA
5	AG75-3336	Washer-felt, AG73-3301	FAA-PMA
6	201-KS	Bearing, AG73-3301	F/N
7	AG75-3359	Washer-felt, AG73-3301	FAA-PMA
8	AG75-3358	Shield-bearing dust, AG73-3301	FAA-PMA
	Attach hdw.	1 ea. AN310-6, 1 ea. AN960-616, 1 ea. AN380-3-3	F/N
9	AG73-3310	Bearing housing-front	FAA-PMA
	AG73-3310-1	Shim-AG73-3310-2 cap to AG73-3310-3 base, 2 req.	FAA-PMA
5	AG75-3336	Washer-felt, AG73-3310	FAA-PMA
6	201-KS	Bearing, AG73-3310	F/N
7	AG75-3359	Washer-felt, AG73-3310	FAA-PMA
8	AG75-3358	Shield-bearing dust, AG73-3310	FAA-PMA
	Attach hdw.	1 ea. AN310-6, 1 ea. AN960-616, 1 ea. AN380-2-2	F/N
11 & 12	75-3362-1	Stick & socket assy-rear, wood	Recond.
11 & 12	75-3362-LM	Stick & socket assy-rear, metal	Recond.
11	73-3302-3	Socket assy-rear stick	Recond.
	K-4	Replacement bearing, 2 required	F/N

Figure 56

Index

No.	Part No.	Description	Cond.
12	AG75-3360	Stick-wood,control front or rear	FAA-PMA
12	AG75-3347	Stick-metal, control front or rear	FAA-PMA
	Attach hdw.	2 ea. AN24-36, 2 ea. AN320-4, 2 ea. AN380-2-2, 2 ea. AN960-416, 2 ea. AN316-4	F/N
13	75-3326-1	Bolt-control stop, 2 required	F/N
15 & 16	75-3362-2	Stick & socket assy-wood, front	Recond.
15 & 16	75-3362-2M	Stick & socket assy-metal, front	Recond.
15	73-3302-2	Socket assy-front	Recond.
	K-4	Replacement bearing, 2 required	F/N
	Balance attach hdw.	4 ea. AN4-34, 2 ea. AN4-22, 2 ea. AN4-20, 2 ea. AN4-6, 8 ea. AN310-4, 8 ea. AN960-416, 8 ea. AN380-2-2	F/N

ELEVATOR CONTROL INSTALLATION - R-670, PT-17, N2S-4, R-680, PT-13, N2S-5

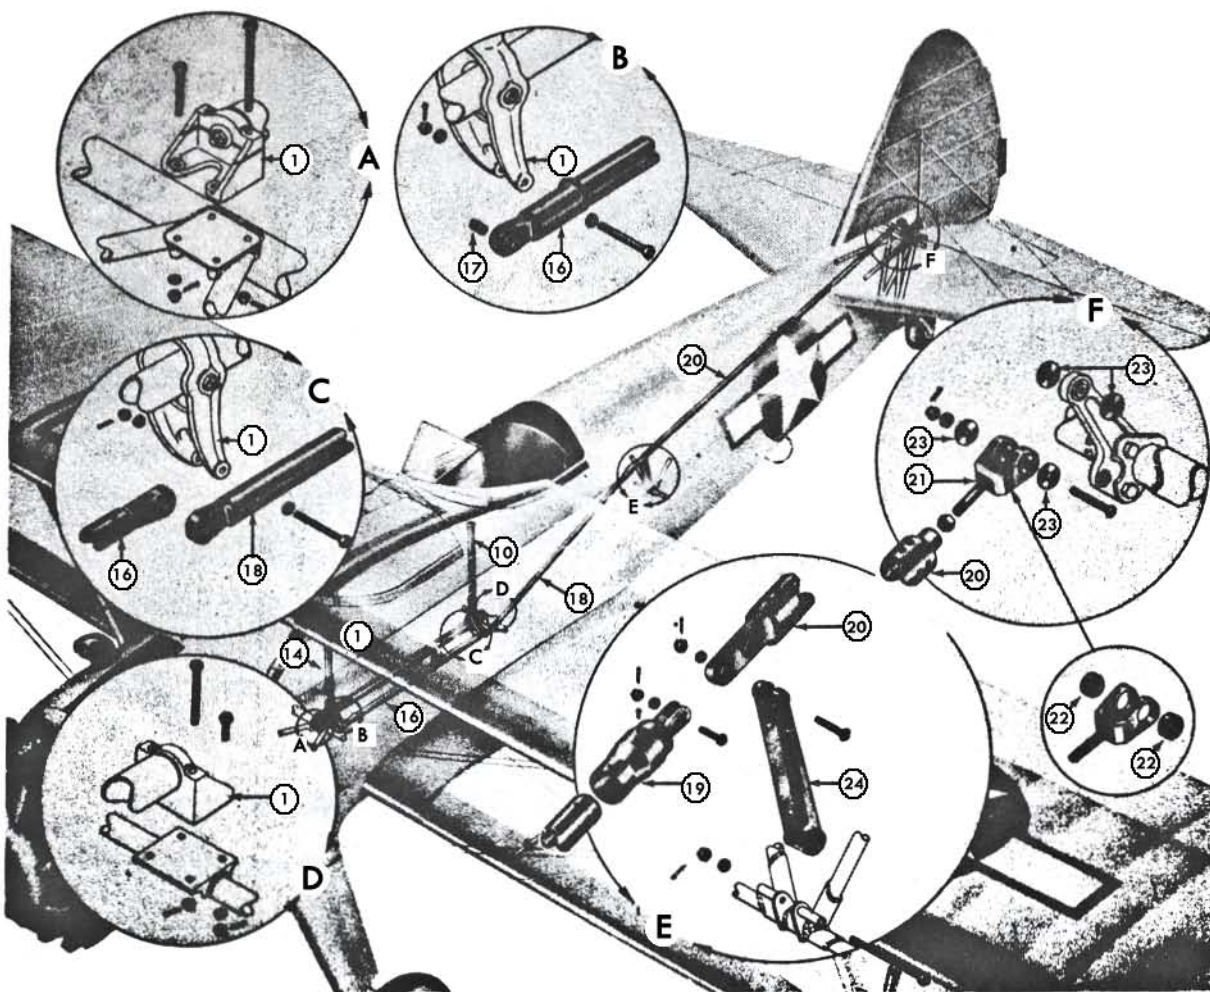


Figure 57 Elevator Control Installation