

Figure 56

Index

No.	Part No.	Description	Cond.
12	AG75-3360	Stick-wood,control front or rear	FAA-PMA
12	AG75-3347	Stick-metal, control front or rear	FAA-PMA
	Attach hdw.	2 ea. AN24-36, 2 ea. AN320-4, 2 ea. AN380-2-2, 2 ea. AN960-416, 2 ea. AN316-4	F/N
13	75-3326-1	Bolt-control stop, 2 required	F/N
15 & 16	75-3362-2	Stick & socket assy-wood, front	Recond.
15 & 16	75-3362-2M	Stick & socket assy-metal, front	Recond.
15	73-3302-2	Socket assy-front	Recond.
	K-4	Replacement bearing, 2 required	F/N
	Balance attach hdw.	4 ea. AN4-34, 2 ea. AN4-22, 2 ea. AN4-20, 2 ea. AN4-6, 8 ea. AN310-4, 8 ea. AN960-416, 8 ea. AN380-2-2	F/N

ELEVATOR CONTROL INSTALLATION - R-670, PT-17, N2S-4, R-680, PT-13, N2S-5

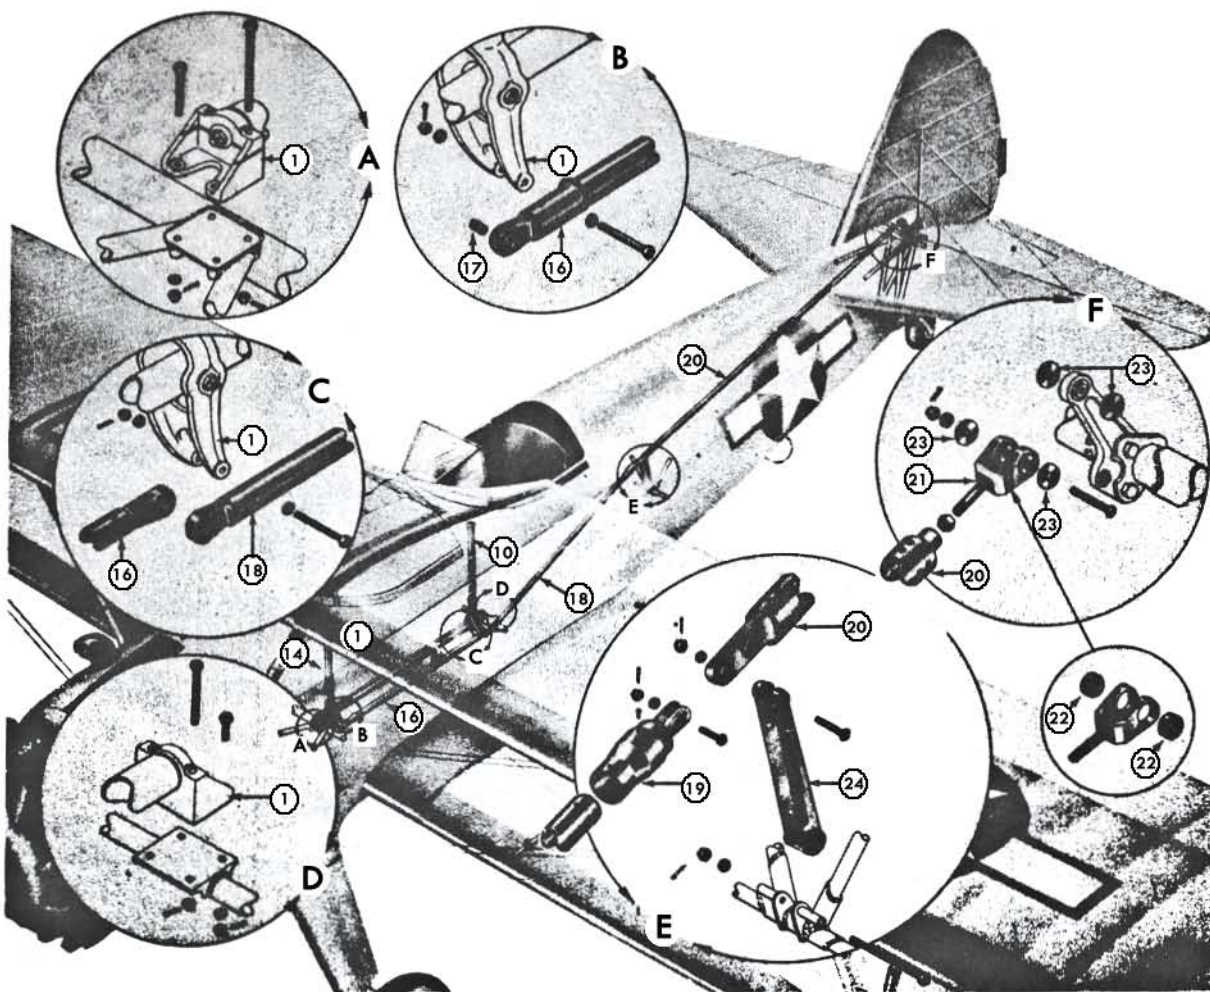


Figure 57 Elevator Control Installation

ELEVATOR CONTROL INSTALLATION - R-670, PT-17, N2S-4, R-680, PT-13, N2S-5 continued

Figure 57

Index

No.	Part No.	Description	Cond.
16	75-3342	Tube assy-interstick push pull	Recond.
16	AG75-3342	Tube assy-interstick push pull	FAA-PMA
17	S-254-31	Spacer-1/4" bolt, 75-3342 tube	N-P
	Attach hdw.	1 ea. AN4-22, 2 ea. AN960-10, 1 ea. AN310-4, 1 ea. AN380-2-2	F/N
18	AG75-3332	Tube assy-elevator push pull front	FAA-PMA
18	75-3332	Tube assy-elevator push pull front	Recond.
19	AG75-3334-5	Terminal assy-front (AG75-3332 tube)	FAA-PMA
	AG75-3334-1	Housing support part of AG75-3334-5	FAA-PMA
	AG75-3334-2	Bearing housing part of AG75-3334-5	FAA-PMA
	K5	Replacement bearing for AG75-3334-5 terminal	FAA-PMA
	AG75-3334-4	Washer for AG75-3334-5 terminal	FAA-PMA
	AG75-3334-3	Clevis terminal for AG75-3334-5 terminal	FAA-PMA
	Attach hdw.	1 ea. AN315-5, 1 ea. AN316-5, 1 ea. AN501A8-5, 1 ea. AN960-516	F/N
	AG75-3311-3	Fitting-AG75-3332 push pull tube front end	FAA-PMA
	K-S4	Replacement bearing-AG75-3332 tube, front end	F/N
	Attach hdw.	AG75-3332 front 1 ea. AN4-22, 2 ea. AN960-416, 1 ea. AN310-4, 1 ea. AN380-2-2	F/N
20	AG75-3333-1	Tube assy-elevator push pull rear	FAA-PMA
20	75-3333-1	Tube assy-elevator push pull rear	Recond.
	AG75-3335-1	Fitting-rear elevator push pull tube front	FAA-PMA
	K-4	Replacement bearing, AG75-3335-1	F/N
	K-S4	Replacement bearing, AG75-3335-1	F/N
	AG75-3335-2	Fitting-rear elevator push pull tube, rear	FAA-PMA
21	AG75-3339	Terminal assy-with bushings, elevator push pull tube, rear	FAA-PMA
	AG75-3344	Terminal without bushings, elevator push pull tube, rear	FAA-PMA
22	75-3328	Bushing-elevator push pull tube-rubber, 2 required	N-P
	Attach hdw.	1 ea. AN316-4, 1 ea. AN24-17, 1 ea. AN24-30, 1 ea. AN960-416, 1 ea. AN320-4, 1 ea. AN380-2-2	F/N
23	AG75-4513-33	Washer-special, 4 required	FAA-PMA
	Attach hdw.	1 ea. AN960-416L, 1 ea. AN320-4, 1 ea. AN380-2-2	F/N
24	75-3331	Idler assy-elevator push pull tube	N-S
	S-226-16S	Replacement bushing - 75-3331 idler, 2 required	N-P
	K-4	Replacement bearing for 75-3331 idler, 2 required	FAA-PMA
	Attach hdw.	1 ea. AN4-35, 1 ea. AN24-21, 1 ea. AN310-4, 2 ea. AN960-416, 2 ea. AN380-2-2	F/N